

FDW10 FINEDEW™ DESKTOP CHILLED MIRROR HYGROMETER User's Manual



Thank you for purchasing the FDW10 FINEDEW™ Desktop Chilled Mirror Hygrometer.

This manual contains information for ensuring the correct use of the FDW10. It also provides necessary information for installation, maintenance, and troubleshooting.

This manual should be read by those who design and maintain equipment that uses the FDW10. Be sure to keep this manual nearby for handy reference.

Yamatake Corporation

RESTRICTIONS ON USE

This product has been designed, developed and manufactured for general-purpose application in machinery and equipment.

Accordingly, when used in applications outlined below, special care should be taken to implement a fail-safe and/or redundant design concept as well as a periodic maintenance program.

- Safety devices for plant worker protection
- Start/stop control devices for transportation and material handling machines
- Aeronautical/aerospace machines
- Control devices for nuclear reactors

Never use this product in applications where human safety may be put at risk.

NOTICE

Be sure that the user receives this manual before the product is used.

Copying or duplicating this user's manual in part or in whole is forbidden. The information and specifications in this manual are subject to change without notice.

Considerable effort has been made to ensure that this manual is free from inaccuracies and omissions. If you should find an error or omission, please contact Yamatake Corporation.

In no event is Yamatake Corporation liable to anyone for any indirect, special or consequential damages as a result of using this product.

©2008 Yamatake Corporation ALL RIGHTS RESERVED

The FINEDEW™ is a trademark of Yamatake Corporation in Japan.
The Swagelok® is a trademark of Swagelok Company.

Conventions Used in This Manual

- To prevent injury to the operator and others, and to prevent property damage, the following types of safety precautions are indicated:



Warnings are indicated when mishandling this product might result in death or serious injury.



Cautions are indicated when mishandling this product might result in minor injury to the user, or only physical damage to the product.

- In describing the product, this manual uses the icons and conventions listed below.



Use caution when handling the product.



The indicated action is prohibited.



Be sure to follow the indicated instructions.

Handling Precautions:

Handling Precautions indicate items that the user should pay attention to when handling the FDW10.



Note: Notes indicate information that might benefit the user.



This indicates the item or page that the user is requested to refer to.

(1), (2), (3): Numbers within parentheses indicate steps in a sequence or parts of an explanation.

[para] key: Brackets indicate keys on the keyboard.

>>: Indicates the result of an operation, details displayed on a personal computer or other device, or the state of the device after an operation.

Safety Precautions

■ General

WARNING



Do not disassemble the FDW10.
Doing so might cause electric shock or faulty operation.



Do not touch electrically charged parts such as the power terminals.
Doing so might cause electric shock.

CAUTION



Use the FDW10 within the operating ranges recommended in the specifications (temperature, humidity, voltage, vibration, shock, mounting direction, atmosphere, etc.).



Do not block ventilation holes.
Doing so might cause fire or faulty operation.



Do not allow lead clippings, chips or water to enter the controller case.
Doing so might cause fire or faulty operation.



Use the relays within the recommended life.
Failure to do so might cause fire or faulty operation.



Use Yamatake Corporation's "SURGENON" if there is the risk of power surges caused by lightning.
Lightning power surges might cause fire or faulty operation.



The controller requires 5 seconds to stabilize after power ON. Great care should be taken if the relay output from the controller is used as an interlock signal.



Do not operate the key with a pencil or sharp-tipped object.
Doing so might cause faulty operation.



Do not bend the sensor cable at an acute angle.
Doing so might cause the optical fiber in the sensor cable to snap.



Do not pull the sensor cable with excessive force.
Doing so might cause the optical fiber in the sensor cable to break.



Do not apply an excessive vibration or impact to the sensor unit.
Doing so might cause device failure.



This unit must be used in combination only with those devices whose serial numbers are stated on the inspection data sheet.
Otherwise, the required accuracy may not be obtainable.

■ Mounting/Wiring

WARNING



Before wiring or removing/mounting the FDW10, be sure to turn the power OFF.
Failure to do so might cause electric shock.

CAUTION



Wire the FDW10 properly according to the instructions.
Also, wire the FDW10 using the specified power leads according to recognized installation methods.
Failure to do so might cause electric shock, fire or faulty operation.



After the wiring has been completed, always check that the wiring is correct.
Incorrect wiring may cause damage or malfunction.



Do not connect any terminating resistor in the communication path for RS-485 communications.
Doing so might cause the communication to fail.



When connecting the sensor unit to a Swagelok 3/4" union tee, tighten the retaining nuts firmly.



Tighten the sensor cap of the sensor unit firmly so that it will not come loose.

Organization of This User's Manual

This manual is organized as follows:

Chapter 1. OVERVIEW

This chapter describes the outline of the FDW10.

Chapter 2. NAMES AND FUNCTIONS OF PARTS

This chapter describes the part names and functions of the FDW10.

Chapter 3. PREPARATIONS FOR MEASUREMENT

This chapter describes the installation procedures of the FDW10.

Chapter 4. OPERATING PRINCIPLE AND METHOD OF DEW POINT MEASUREMENT

This chapter describes the operating principle of this unit, operation procedures, and cautions.

Chapter 5. BASIC OPERATION

This chapter describes the basic operation of the FDW10.

Chapter 6. MAINTENANCE AND TROUBLESHOOTING

This chapter describes how to clean the mirror, how to locate the cause if a problem occurs during operation, and how to take corrective actions.

Chapter 7. DISPOSAL

This chapter describes how to dispose of the FDW10.

Chapter 8. SPECIFICATIONS

This chapter describes the general specifications and external dimensions of the FDW10.

Contents

Conventions Used in This Manual	
Safety Precautions	
The Role of This Manual	
Organization of This User's Manual	

Chapter 1. OVERVIEW

1-1 Overview/Features	1
■ Overview	1
■ Features	1
1-2 Model Selection Table	2
■ Model number list	2
■ Option parts	2
■ Maintenance parts	2

Chapter 2. NAMES AND FUNCTIONS OF PARTS

2-1 Basic Controller	3
■ Models with handle	3
■ Models with panel mount brackets	7
2-2 Sensor Unit	8
■ S type sensor unit	8
■ L type sensor unit	8

Chapter 3. PREPARATIONS FOR MEASUREMENT

3-1 Mounting of Sensor Unit	10
■ Tools	10
■ Measurement by direct insertion of the probe into a pipe	10
■ Measurement using sampling piping	11
■ Measurement using open-space installation	11
3-2 Mounting of Basic Controller	12
■ Installation of models with handle	12
■ Installation of models with panel mount brackets	12
3-3 Wiring	13
■ Basic Controller rear panel	13
■ Wiring to output connectors	14
■ Connection of output signals	15
■ Connections for communication function	16

Chapter 4. OPERATING PRINCIPLE AND METHOD OF DEW POINT MEASUREMENT

■ About dew point temperature	17
■ Operating principle	17

■ Reading the dew point temperature display	18
■ Dew point and frost point.....	18
■ Supercooled dew point	19
■ Effects of contamination on the mirror	19
■ Measurement of a high dew point	20
■ Pressure and the measurement of dew point temperature.....	20
■ Sampling piping	20
■ Filter.....	20
■ Water leakage from the sensor	21
■ Calculation of relative humidity.....	21

Chapter 5. BASIC OPERATION

5-1 Starting Up the Unit	22
5-2 Switching between Standby Mode and Measurement Mode.....	23
5-3 Operation in Measurement Mode.....	24
5-4 Operation in Standby Mode	29
5-5 Using the Dew Point Temperature Upper and Lower Limit Alarms	32
5-6 Peltier Device Protection Function	35

Chapter 6. MAINTENANCE AND TROUBLESHOOTING

6-1 Cleaning the Mirror	36
■ Checking the mirror for contamination	36
■ Cleaning the mirror	36
6-2 Troubleshooting.....	39
6-3 Calibration	40
■ Calibration before shipment	40
■ Certificate of traceability.....	40
■ Recalibration after repair and maintenance.....	40
■ Issue of certificate of calibration with JCSS symbol.....	40

Chapter 7. DISPOSAL

Chapter 8. SPECIFICATIONS

8-1 Specifications	42
■ S type sensor unit	42
■ L type sensor unit	43
■ Basic controller.....	44
8-2 External Dimensions	45
■ S type sensor unit	45
■ L type sensor unit	45
■ Basic controller.....	46

Chapter 1. OVERVIEW

1 - 1 Overview/Features

■ Overview

The FDW10 Desktop Chilled Mirror Hygrometer (hereafter referred to as "this unit") is part of the FINEDEW™ family of instruments. It utilizes the chilled mirror method of humidity measurement, as specified in JIS Z 8806, "Humidity—Measurement Methods." This unit is composed of a compact sensor unit featuring direct insertion into the measurement environment, plus a desktop controller.

■ Features

Two kinds of sensors are available for this unit, an S type with compact design and an L type capable of measuring a lower dew point.

The sensor probes of both the S and L types attach to a Swagelok 3/4" union tee, the standard connection used in research and development by researchers in the fields of physics and chemistry, and for industrial applications. The sensors are built to withstand pressures up to 1 MPa.

The controller is a desktop type model, designed for easy portability. Models with panel mount brackets are also available.

The following functions are incorporated into the controller:

- External analog output (dew point temperature output): 0 to 10 Vdc or 4 to 20 mA
- External analog output (condensation level): 1 to 5 Vdc or 4 to 20 mA
- External digital output (dew point temperature upper and lower limit alarms, and control status): contact output
- RS-485 communications

1 - 2 Model Selection Table

Model number list

Name	Controller					Sensor unit			Addition	Specifications		
	Basic model number	Control type	Analog output	Digital output	Option 1	Handle Bracket	Probe Type	Connection cable			Option 2	Option 3
FDW											□	FINEDEW™
	10											Desktop chilled mirror hygrometer
		B										Basic controller
			1									Analog output: dew point (0 to 10 V), condensation level (1 to 5 V)
				2								Analog output: dew point (4 to 20 mA), condensation level (4 to 20 mA)
					1							Digital output: dew point upper/lower limit alarm, Control status
						0						None
							1					With handle
								5				With panel mount brackets
									S			S type (standard type)
										L		L type (low dew point type)
											1	50 cm
											0	None
											0	None
											D	Inspection certificate provided
											Y	Inspection certificate + traceability certification

Optional parts

For data exchange using the communication function, you must order the following units and components separately:

Name	Model No.
Communication controller (RS-232C/RS-485 convertor)	CMC10L00A000
AC adapter	81446748-001
RS-485 connected connector	81440792-001
Smart loader package	SLP-C35J50

Maintenance parts

Parts made by Yamatake

Name	Model No.
Sensor filter	81447211-001

Parts made by other companies

Name	Manufacturer	Model No.	Product name of manufacturer	Remarks
Union tee	Swagelok	SS-1210-03	Swagelok 3/4" union tee	3/4 inch
Reducer	Swagelok	SS-400-R-12	Swagelok 3/4" → 1/4" reducer	1/4 ↔ 3/4 inch
Polyester swab	ITW Texwipe	TX761	Alpha Swab with Long Handle	100 units
Output connected plug	Sato parts	ML-1500-P-4-GY	Screwless terminal unit	4 pin-plug
Power cable	Misumi	ULJP-C-ULJPSS-2	Power code	2 m

! Handling Precautions


- Do not use any union tee or reducer other than those manufactured by Swagelok.

Chapter 2. NAMES AND FUNCTIONS OF PARTS

2 - 1 Basic Controller

■ Models with handle

● Externals

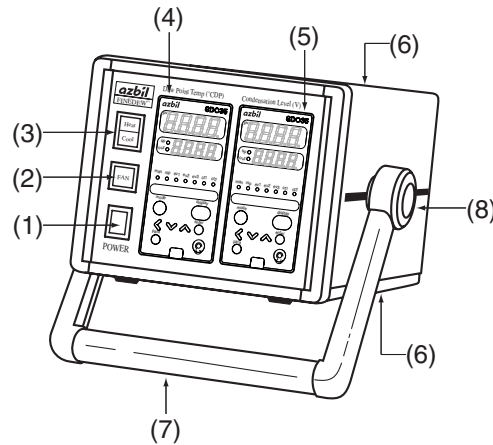

(1) Power switch: Used to turn the unit ON/OFF.

(2) FAN indicator-switch: Turns ON/OFF the fan of the L type probe when it is connected. When the fan is ON, the FAN indicator-switch is lit.

⚠ Handling Precautions

- This switch is not used when an S type probe is connected. In this case it is best to leave the FAN indicator-switch turned off.

(3) Heat/cool indicators: These indicators show the status of the Peltier device inside the sensor probe. When cooling/heating current is supplied to the Peltier device, "Cool"/"Heat" is lit. Indicators are off if neither cooling nor heating current is being supplied.

(4) Dew Point Temperature controller: Displays the dew point temperature measured by the sensor. It also controls the dew point upper and lower limit alarms, and the Peltier device protection function.


(5) Condensation Level controller: Controls the Peltier device inside the sensor probe.

(6) Ventilation holes: Located on the top and bottom surfaces. Heat from the controller escapes through these holes. Be sure not to block the ventilation holes on the top or bottom during operation.

(7) Handle: For carrying the controller and for positioning it on a desk with the screen tilted upwards.

(8) Handle release: The tilt angle of the handle can be adjusted in 30° increments by pushing this button.

● Front of the Basic Controller

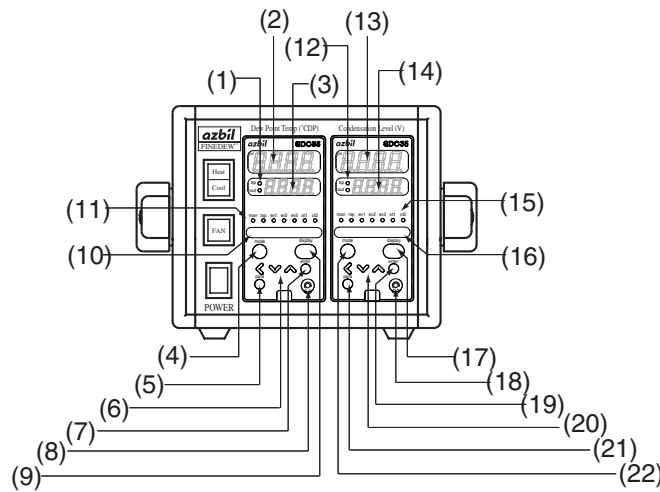

Parts of the Dew Point Temperature controller front panel:

- (1) "sp" indicator: Lit while the dew point temperature is displayed. Turned off during setting of temperature levels for the dew point temperature upper and lower limit alarms.
 - "out" indicator: Not used. Always off.
 - (2) Dew point temperature display: Shows the dew point temperature measured by the sensor unit. "E t" is shown during setting of the temperature level for the dew point temperature lower limit alarm, and "E 1.5b" is shown during setting of the temperature level for the upper limit alarm.
 - (3) Dew point temp. upper/lower limit alarm display: Alarm display for dew point temperature upper and lower limit. Also shows the set temperature during setting of the temperature level for the dew point temperature upper or lower limit alarm. Normally off.
 - (4) [mode] key: Used to display the dew point temperature on the dew point temperature display. Same function as the [display] key on this controller.
 - (5) [para] key: Used to start changing the settings for the dew point temperature upper and lower limit alarms.
- ! Handling Precautions**
- Do not press the [para] key continuously for 2 s or longer, or the Dew Point Temperature controller will enter setup mode. If this happens accidentally, press the [display] key on the Dew Point Temperature controller to return to the previous status.
- (6) [<], [v], [^] key: Used to change the value set for the dew point temperature upper or lower limit alarm.
 - (7) [enter] key: Used to start changing the settings for the dew point temperature upper or lower limit alarm, and to finalize the changed value.
 - (8) Jack cover and loader connector: Not normally used.
 - (9) [display] key: Used to display the dew point temperature on the dew point temperature display.

- (10) Multi-status display: All LEDs blink while the Peltier device protection function is activated. If a sensor error is detected, the LEDs light up sequentially from left to right, and then from right to left. Normally off.
- (11) Mode indicators:
- "man" indicator: Not used. Always off.
 - "rsp" indicator: Not used. Always off.
 - "ev1" indicator: Dew point upper or lower limit alarm indicator. Lit if there is a dew point upper/lower limit alarm.
 - "ev2" indicator: Peltier device protection function indicator. Lit if the Peltier device protection function is activated.
 - "ev3" indicator: Peltier device protection function indicator. Lit if the Peltier device protection function is activated.
 - "ot1" indicator: Not used. Always on.
 - "ot2" indicator: Not used. Always on.

Parts of the Condensation Level controller front panel:

- (12) "sp" indicator: Lit when the target level for condensation control is shown on the mirror status display.
- "out" indicator: Lit when the Peltier device current is shown on the mirror status display.
- (13) Condensation level display:
Shows the level of condensation on the mirror inside the sensor probe. (Where not otherwise specified, "mirror" in this document should be understood to refer to the surface of the mirror.) When PID parameters for the Condensation Level controller are shown on the mirror status display, the corresponding display item is shown.
- (14) Mirror status display: Shows the target level for condensation control or the Peltier device current. Also shows parameter values when PID parameters are being set on this controller.
- (15) Mode indicators:
- "man" indicator: Lit when the Condensation Level controller is on standby.
 - "rsp" indicator: Not used. Always off.
 - "ev1" indicator: Lit when heating current is output to the Peltier device.
 - "ev2" indicator: Lit when cooling current is output to the Peltier device.
 - "ev3" indicator: Lit when the condensation level on the mirror in the sensor probe is properly controlled in measurement mode so that it does not increase or decrease. When this indicator is lit, the dew point temperature shown on the dew point display of the Dew Point Temperature controller is within its specified accuracy.
 - "ot1" indicator: Not used. Always on.
 - "ot2" indicator: Not used. Always on.
- (16) Multi-status indicator: All LEDs are lit when the condensation level on the mirror in the sensor probe is properly controlled in measurement mode so that it does not increase or decrease. When the multi-status LEDs are lit, the dew point temperature shown on the dew point display of the Dew Point Temperature controller is within its specified accuracy.
- (17) [display] key: Used to change the contents of the mirror status display.
- (18) Jack cover and loader connector:
Not normally used.

- (19) [enter] key: This key is used to start changing various Condensation Level controller settings and to finalize the changed values.
- (20) [<], [v], [^] key: These keys are used to change various Condensation Level controller settings.
- (21) [para] key: Displays PID parameters for the Condensation Level controller.


! Handling Precautions

- Do not press the [para] key continuously for 2 s or longer, or the Condensation Level controller will enter setup mode. If this happens accidentally, press the [display] key on the Condensation Level controller to return to the previous status.

- (22) [mode] key: Switches between standby mode and measurement mode.


● **Basic Controller rear panel**

Connectors and terminals used to connect the power supply, input, and output are located on the rear of the basic controller.

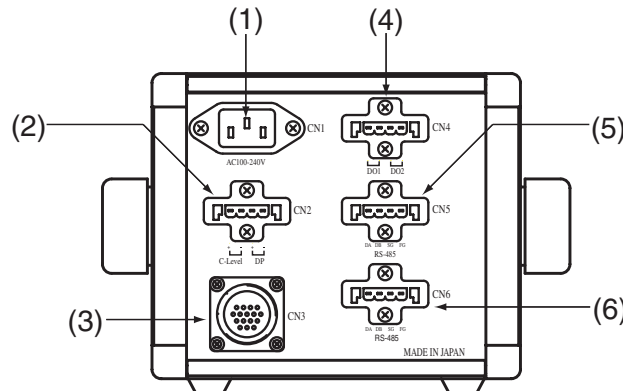

- (1) CN1 Power connector: This connector is used for the AC power cable.
- (2) CN2 Analog output terminal:
Outputs analog signals for the dew point temperature and condensation level. For the analog signal, either voltage or current output can be selected by means of the controller model No.
- (3) CN3 Sensor unit connector:
This connector is for the relay cable from the sensor unit.
- (4) CN4 Digital output terminal:
Outputs digital signals for the dew point temperature upper or lower limit alarm and for control status.
- (5) CN5 Communication output terminal 1:
RS-485 communications input/output, used to exchange information about the status of the dew point temperature display controller and Condensation Level controller with an external device.
- (6) CN6 Communication output terminal 2:
Same as CN5. This terminal is used for jumper wiring of multiple controllers.

■ Models with panel mount brackets

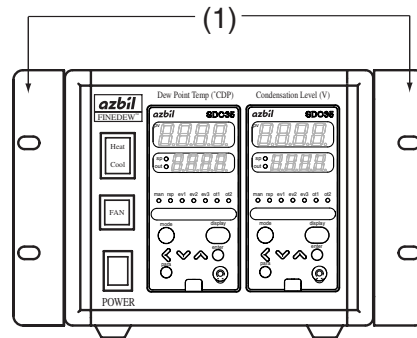


(1) Panel mount brackets: These brackets are used to mount the controller in a rack panel.

Parts other than those described above are the same as for models with a handle.

2 - 2 Sensor Unit


■ S type sensor unit

● Parts of an S type sensor

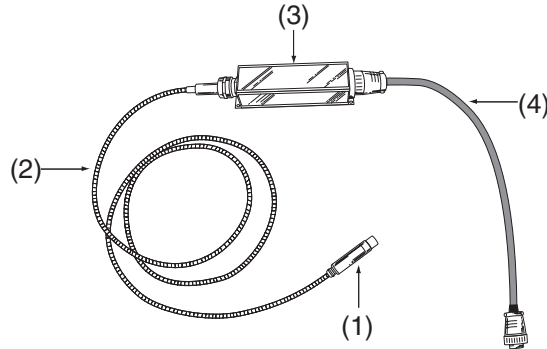


- (1) Sensor probe: The sensor for the chilled mirror hygrometer is incorporated into this probe. The probe attaches to a Swagelok 3/4" union tee, the standard connection used for research and development in the fields of physics and chemistry, and at industrial work sites. For details, see the descriptions below.
- (2) Sensor cable: The sensor cable is protected by the SUS spiral tube connecting the sensor probe and relay box. Since the sensor cable includes glass optical fibers, do not pull on it excessively or bend it at an acute angle.
- (3) Connection box: The relay box consists of a photoelectric device that receives the signal from the optical fibers in the sensor probe, and a connector mechanism for the electrical signal between the sensor probe and controller.
- (4) Connection cable: Connects the relay box to the controller.

● Details of the sensor probe

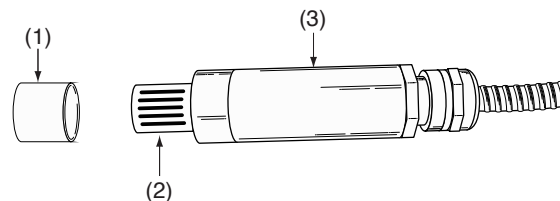

- (1) Sensor filter: Fluoresin porous sensor filter allows water vapor but not water droplets to pass. Normally, this filter is put on the sensor cap.
- (2) Sensor cap: The cap is used to protect the sensor part of the sensor probe.

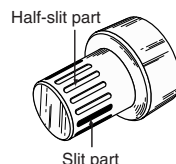


- Slit part: Slits in the sensor cap allow the gas to be measured to diffuse and enter the sensor.
- Half-slit part: A light shield on the sensor cap prevents the condensation detection function from malfunctioning because of light reflected from the outside, if the detector light emitted from the two-core glass optical fiber in the optical fiber pipe to the mirror leaks to the outside through the slit portion. The front of the mirror of the sensor is covered with the half-slit part to block reflected light from the outside.

- (3) Sensor body: A mechanism for radiating the heat produced by the Peltier device in the sensor probe is incorporated into the sensor.

● **Details of sensor-probe sensor**


The sensor inside the sensor probe is the basis for chilled mirror hygrometer measurement.

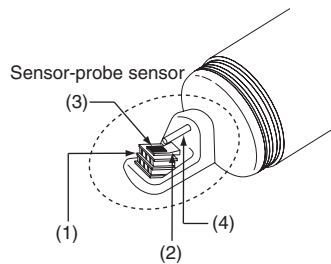

- (1) Peltier device: A thermoelectric cooling device for cooling the mirror.
- (2) Resistance temperature detector: A platinum resistance temperature detector that measures the temperature of the mirror. It is sandwiched between the cooling surface of the Peltier device and the mirror.
- (3) Mirror: A mirror which precipitates condensation (dew or frost).
- (4) Optical fiber pipe: A stainless steel pipe containing dual-core glass optical fiber for the detection of condensation (dew or frost) on the mirror.

■ **L type sensor unit**

● **Details of sensor-probe**

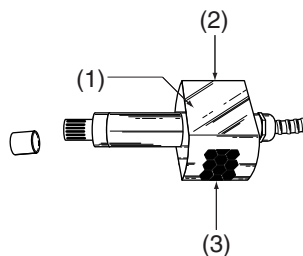

- (1) Heat radiation component: The heat radiation component is located at the rear of the sensor, and contains the heat radiation mechanism. It includes a heat radiation fin and a cooling fan.
- (2) Opening for cooling fan: An air inlet port for the internal cooling fan. Do not block this opening during operation. Also, do not insert a sharp object such as the tip of a tool through the opening.
- (3) Opening for heat radiation fin: An outlet to vent air from the internal heat radiation fin. Do not block this opening during operation.

Parts other than those described above are the same as for the S type sensor unit.

Chapter 3. PREPARATIONS FOR MEASUREMENT

3 - 1 Mounting of Sensor Unit

⚠ WARNING



Before wiring, or removing/mounting the FDW10, be sure to turn the power OFF. Failure to do so might cause electric shock.

⚠ CAUTION



When connecting the sensor unit to a Swagelok® 3/4" union tee, tighten the retaining nuts firmly.



Tighten the sensor cap of the sensor unit firmly so that it will not come loose.

■ Tools


Wrenches (2)

■ Measurement by direct insertion of the probe into a pipe

Connect the Swagelok 3/4" union tee supplied with this unit to the pipe containing the gas to be measured. The gas to be measured flows through the run ports of the union tee and the sensor probe is inserted into the branch port.

If the diameter of the run ports does not match that of the pipe for the gas to be measured, use an appropriate reducer. (Two Swagelok 3/4"→1/4" reducers are supplied with this unit as a standard accessory.)

The union tee should be mounted so that its orientation satisfies the limitations on the mounting angle of the sensor probe (horizontal to downward vertical).

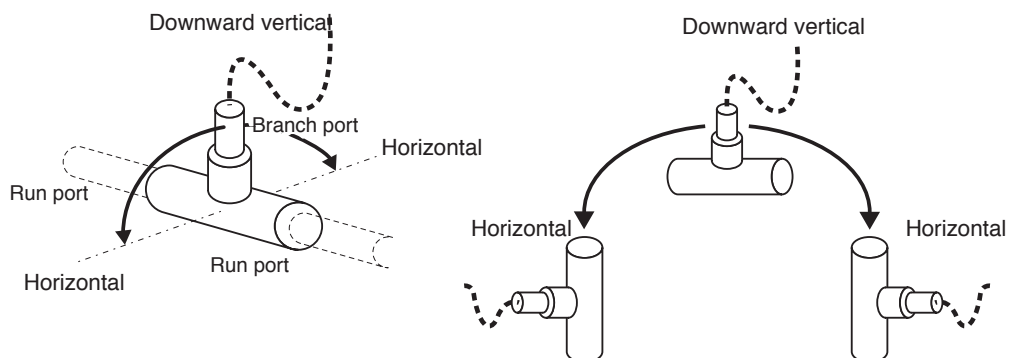

After mounting of the Swagelok 3/4" union tee is complete, mount the sensor probe on the branch line, using the following procedure. First, insert the sensor probe into the branch line. Do not remove the branch line nut, but only loosen it. Next, after checking that the sensor probe fits snugly against the shoulder inside the branch line, tighten the nut by hand. Finally, while holding the main body of the Swagelok 3/4" union tee firmly with a wrench so that it does not move, tighten the nut 1 and 1/4 turns further.

To remove the sensor probe once it has been mounted, loosen the nut completely. If the SUS front ferrule and back ferrule are used, they are engaged in the sensor probe and cannot be removed. However, this is not a problem.

When mounting these ferrules on the Swagelok 3/4" union tee again, push in the front ferrule so that it adheres tightly to the seal surface inside the branch line. After that, turn the nut to the previously tightened position (after the 1 and 1/4 turns mentioned above). You will feel resistance at this point. After that, retighten the nut slightly further.

! Handling Precautions

- Do not use any union tee or reducer other than those manufactured by Swagelok.
- When measuring a gas having a higher dew point temperature than the ambient temperature of the sensor probe, heat the sensor probe so that its temperature is 5 to 10 °C higher than the expected dew point temperature (within the rated temperature range of the sensor probe).

■ Measurement using sampling piping

When sampling the gas to be measured using sampling piping, attach the Swagelok 3/4" union tee supplied with this unit to the top end of the sampling pipe and mount the sensor probe on it.

! Handling Precautions

- When measuring the gas having a low dew point, do not use sampling piping made of a material that absorbs water easily.
- If it is thought that the gas to be measured includes many contaminating agents (dust or dirt), install a particle filter midstream in the sampling piping.

If a sufficient push-out pressure does not exist at the sampling point, an air pump for sampling and/or a flowmeter for checking of the flow rate are needed.

An air pump for sampling should be installed on the downstream side of the sensor probe to prevent unnecessary condensation, water content absorption, or backflow of the outside air from the downstream side. An appropriate flow rate is 50 mL to 5L per minute.

However, if sufficient pressure is expected at the sampling port, the air pump can be omitted. Even in this case, it is preferable to use a flowmeter to check the flow rate.

If the downstream side of the sampling piping is open to the atmosphere, a pipe approximately 0.5 to 1 m long should be installed on the exhaust side so that the backflow of the ambient atmosphere from the downstream side does not affect measurement.

■ Measurement using open-space installation

This unit can be used in an air conditioning duct, with environment test equipment, and/or in a large space for meteorological observation. For such uses the sensor should be supported appropriately so that it is secured within the measurement environment.

Note that the sensor part of the sensor unit heats up (the L type sensor unit also has a heat radiation component). It may be necessary to investigate whether the effect of this heat on the environment can be ignored.

3 - 2 Mounting of Basic Controller


■ Installation of models with handle

Basic controller models with a handle are designed to be set on a table. Place a controller with a handle in a location where it is stable and where there is a wide area similar to a desktop.

To tilt the screen of the controller upwards using the handle, push both sides of the handle stopper to unlock the handle. It can then be rotated freely and latched at increments of 30°. When the handle is latched, the pushed-in handle stopper returns to its original position. Latch the handle at the desired angle before using the hygrometer.

■ Installation of models with panel mount brackets

Models with panel mount brackets can be installed in an opening of a control panel. Required dimensions of the opening are shown below. Check that the thickness and material of the panel provide sufficient strength to support the basic controller.

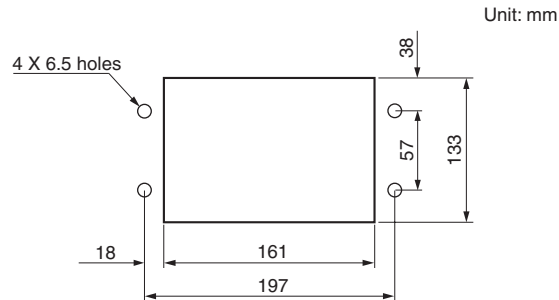

3 - 3 Wiring

⚠ WARNING



Before wiring or removing/mounting the FDW10, be sure to turn the power OFF.
Failure to do so might cause electric shock.

⚠ CAUTION



Wire the FDW10 properly according to the instructions.
Also wire the FDW10 using specified power leads according to recognized installation methods.

Failure to do so might cause electric shock, fire or faulty operation.




After the wiring has been completed, always check that the wiring is correct.
Incorrect wiring may cause damage or malfunction.



Do not connect any terminating resistor in the communication path for RS-485 communications.

Doing so might cause the communication to fail.

■ Basic controller rear panel

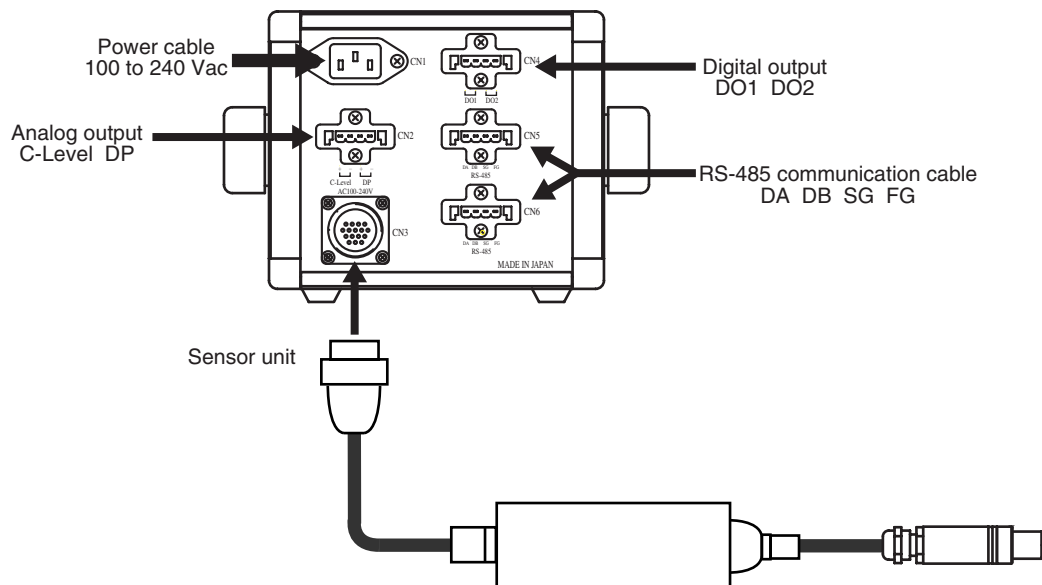

■ Wiring to output connectors

Two-piece screwless connectors are used for CN2, CN4, CN5, and CN6. After the cables have been connected to the plugs for the attached output connectors, insert these plugs into the specified connectors on the rear panel of the basic controller. This ensures easy wiring work.

! Handling Precautions

- Be sure that each plug is inserted into the correct connector.

● Tools and materials


- Connect suitable electrical wire to the plugs for the output connectors

Type	Size	Remarks
Solid wire	0.4 mm dia. (AWG26) to 1.0 mm dia. (AWG18)	
Stranded wire	0.3 mm ² (AWG22) to 0.75 mm ² (AWG20)	Diameter of wire strands should be 0.18 mm or more.


- Screwdriver, wire cutter, and wire stripper

● Method


- (1) Strip approx. 9 mm of insulation from the wire, referring to the strip gauge on the top of the plug for the output connector.

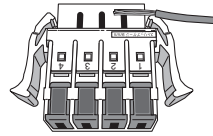


- (2) With the screwdriver, push the black piano-key type button at the rear of the plug firmly until it latches securely.

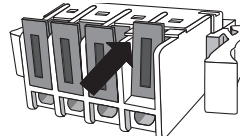


- (3) Insert the wire from which insulation has been stripped into the hole below the piano-key button, until the end of the wire is inserted as far as it will go.

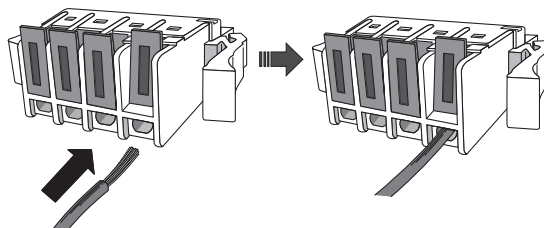

- (4) With your finger, return the piano-key button to its original position. The electric wire is now connected. Pull the wire lightly to make sure that it is securely connected.

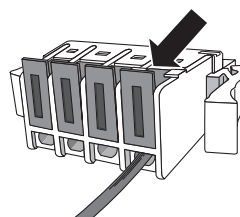


(5) After wiring of the plug is complete, insert the plug into the proper connector.

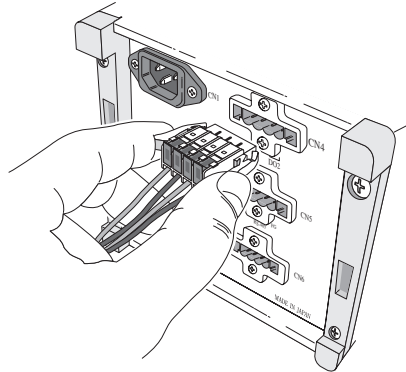

■ Connection of output signals

Connect the analog output signals and digital output signals to CN2 and CN4, respectively.

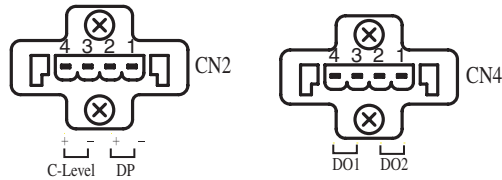

Output		Signal	Connector Pin No.
Dew point temperature	DP	Analog output (-)	CN2-1
		Analog output (+)	CN2-2
Condensation level	C-Level	Analog output (-)	CN2-3
		Analog output (+)	CN2-4
Control status	DO2	Digital output (-)	CN4-1
		Digital output (+)	CN4-2
Dew point temperature upper/lower limit alarm	DO1	Digital output (-)	CN4-3
		Digital output (+)	CN4-4

■ Connections for communication function

! Handling Precautions

- Use of the communication function makes it possible to change various settings of the Dew Point Temperature controller and Condensation Level controller. If this is done incorrectly, serious problems may result. Before using the communication function, please contact Yamatake sales staff.

Status information about the Dew Point Temperature controller and Condensation Level controller can be sent via Yamatake's CMC10L to a personal computer on which the SLP-C35 has been installed.


The CMC10L and basic controller are connected with the RS-485 cable through the CN5 connector on the back of the controller.

The address of the Dew Point Temperature controller is set at "1" at the factory, and the Condensation Level controller address is set at "2."


Up to 15 basic controllers can be connected in a daisy chain configuration through CN6. To do so, however, it is necessary to reset the addresses of the Dew Point Temperature controller and Condensation Level controller inside each basic controller. For details, contact Yamatake sales staff.

! Handling Precautions

- Do not connect DA to DB. Doing so may cause device failure.

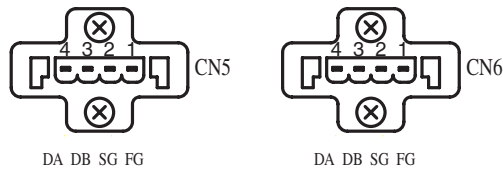

Signal	Connector Pin No.
DA	CN5-4
	CN6-4 (for daisy chain)
DB	CN5-3
	CN6-3 (for daisy chain)
SG	CN5-2
	CN6-2 (for daisy chain)
FG	CN5-1
	CN6-1 (for daisy chain)

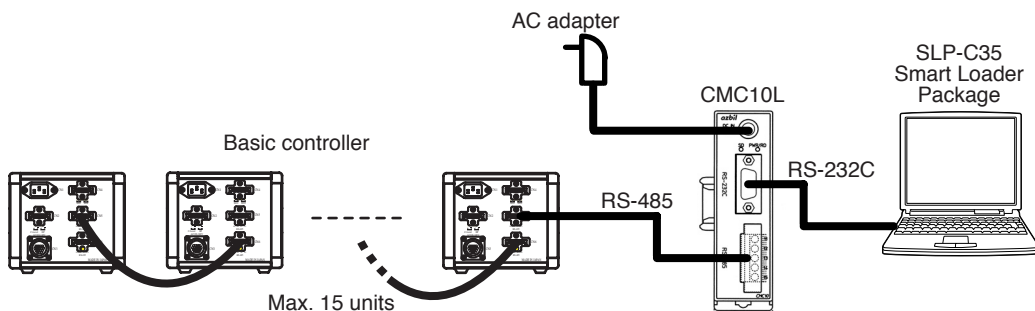

Chapter 4. OPERATING PRINCIPLE AND METHOD OF DEW POINT MEASUREMENT

■ About dew point temperature

Dew point temperature is one of the measures of the volume of water vapor contained by a gas (normally air).

The volume of water vapor that can be contained by a gas is limited. The state in which no more water vapor can be absorbed is called "saturation status." The pressure of the water vapor in saturation status is called the "saturated water vapor pressure." If the temperature and pressure of the gas are determined, the saturated water vapor pressure can be determined uniquely.

The temperature, at which the saturated water vapor pressure above water is equivalent to the partial pressure of the water vapor contained by the gas at a certain temperature, is called "the dew point temperature" (or simply the "dew point").

If the water vapor volume in the gas does not change, the dew point temperature does not change even if the temperature of the gas changes.

This dew point temperature is theoretical. However, in practice it matches the temperature at which condensation starts if the gas is actually cooled. Therefore, the dew point temperature can be predicted by knowing the condensation temperature.


■ Operating principle

A mirror, a Peltier device, an optical fiber pipe containing a two-core glass optical fiber to detect dew produced on the mirror, and an RTD to measure the temperature of the mirror are incorporated into this unit's sensor.

The two-core glass optical fiber is introduced into the photoelectric device inside the relay box through the sensor cable, which is protected by an SUS spiral tube. One optical fiber is connected to the light emitter, which uses a red LED, inside the photoelectric device, while the other optical fiber is connected to the light receiver, which uses a photo diode. The optical fiber pipe is positioned on a slant to the mirror inside the sensor.

When no current is supplied to the Peltier device and the mirror is dry, light emitted through the optical fiber from the emitter is reflected by the mirror and travels to the opposite side. Therefore, almost no light returns through the optical fiber from the light receiver.

At this point, the electrical signal (called the "condensation level") which is converted by the photoelectric device inside the relay box, to which the optical fiber for the light receiver is connected, is at its minimum level. The status of the hygrometer at this point is "standby mode." The condensation level in standby mode is called the "condensation base level."

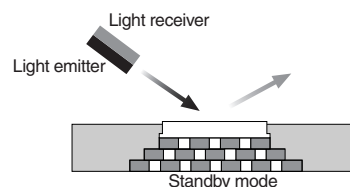


Next, the controller is put into measurement mode. Cooling current is applied to the Peltier device to cool the mirror, and dew condenses on the mirror at a certain temperature.

Now, light coming through the optical fiber from the light emitter scatters because of the dew on the mirror, and a portion of the scattered light returns through the optical fiber on the light receiver side. The condensation level, which is converted to an electrical signal by the photoelectric device inside the relay box, increases.

The controller uses this condensation level as an index to control the amount of current supplied to the Peltier device so that the condensation level remains at the target level for condensation control. At the same time, the temperature of the mirror is measured by the RTD, and this measured temperature is displayed as the dew point temperature.

This unit indicates the condensation level on a scale from 1.0 to 5.0. Note that this is a relative scale without units, so that the absolute value itself has no meaning.

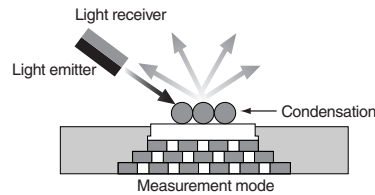

■ Reading the dew point temperature display

The condensation level (amount of condensation) on the mirror and the condensation level have a positive correlation. However, the condensation level and mirror temperature have a nonlinear correlation.

Since the mirror status is controlled so that the condensation level on the mirror does not increase or decrease, the mirror temperature generally shows the dew point temperature regardless of the target level for condensation control (assuming that the target level is within a certain range).

Therefore, when the condensation level is within a certain set range of the target level for condensation control, this unit outputs a control status signal to indicate this fact. Whether the control status signal is ON or OFF is shown by the multi-status indicator on the Condensation Level controller.

When the control status signal is ON, the dew point temperature shown on the dew point temperature display falls within its specified accuracy range.

If the mirror cannot be controlled and the dew point temperature display is outside of the specified accuracy range because the dew point temperature of the gas being measured is changing too rapidly to follow, the control status signal may temporarily be OFF, and the multi-status indicator on the Condensation Level controller may be OFF.

■ Dew point and frost point

If the volume of the water vapor contained by the gas is small and the mirror needs to be cooled to a temperature of 0 °C or less, frost (ice) is likely to occur on the mirror.

This symptom is called "frosting." The temperature of a mirror that is controlled so that the volume of frost on the mirror does not increase or decrease, is the temperature at which the saturated water vapor pressure above the ice is equivalent to the partial pressure of the water vapor contained by the gas. This temperature is called "the frost point temperature" (or "frost point").

In a broad sense, both the dew point temperature and frost point temperature may be generically called "the dew point temperature" (or "dew point").

■ Supercooled dew point

Even though the temperature of the mirror is cooled to 0 °C or less, dew (supercooled water) instead of frost (ice) may precipitate on the mirror, depending on the condition of the mirror and on the operating environment. This may be controlled so that the amount of dew does not increase or decrease.

Great care should be taken since a dew point temperature of 0 °C or less is 1 to 2 °C lower than a frost point temperature of 0 °C or less. The cause of this phenomenon is that the saturated water vapor pressure above water is higher than the saturated water vapor pressure above ice at a temperature of 0 °C or less.

This kind of condensation of supercooled water occurs relatively frequently in a mirror temperature range of approx. 0 to -20 °C. (It may also occur at a lower temperature, depending on conditions.)

Normally, various effects combine to cause supercooled water which has condensed to change to the frost phase of ice as time elapses. When this happens, the temperature of the mirror may also change (increase) from the dew point temperature to the frost point temperature. Also, once the condensation (of supercooled water) on the mirror changes to frost (ice) phase, the frost (ice) will not return to the supercooled water state unless the temperature of the mirror rises to 0 °C or more.


If the temperature of the mirror is 0 °C or less, it is necessary to check whether dew (supercooled water) or frost (ice) is being produced on the mirror. If dew (supercooled water) is produced on the mirror, it is necessary to check when it changes to the frost (ice) phase.

■ Effects of contamination on the mirror

The accuracy of this unit may vary greatly depending on the condition of the mirror. If there is any contamination (water-soluble salts/dust/dirt, oil mist, etc.) on the mirror, the light from the optical fibers in the emitter will scatter on the contaminated surface. This scattered light is transmitted to the photoelectric device in the relay box through the optical fibers in the light receiver, causing the indicated condensation level to increase. As a result, measurement accuracy is adversely affected.

Furthermore, if there is any water-soluble salt on the mirror, it may be dissolved in the condensation (water) on the mirror. Generally, since the saturated water vapor pressure of a salt water solution is often lower than the saturated water vapor pressure of water, this can shift the temperature of the mirror to a higher level.

Also, if contamination continues to accumulate on the mirror, the amount of light scattered by the contaminated surface will be large even when the mirror is dry and in standby mode. As a result, the condensation base level may be higher than the target value for condensation level control. In such a case, the controller cannot control the status of the mirror. To prevent this problem, it is absolutely necessary to keep the mirror clean.

 6-1, Cleaning the mirror (on page 36)

■ Measurement of a high dew point

When measuring a gas with a dew point temperature that is higher than the ambient temperature around the sensor probe, the sensor probe is heated to a temperature 5 to 10 °C higher than the predicted dew point temperature (within the rated temperature range of the sensor unit) so that no unnecessary condensation occurs in a place other than on the mirror inside the sensor probe.

■ Measurement of dew point temperature under pressure

If the gas pressure fluctuates, the dew point temperature likewise increases and decreases if the gas mixing ratio (the ratio of the mass of water vapor to the mass of dry gas) is kept constant. This unit displays the dew point temperature as is at the pressure of the sensor inside the sensor probe.

■ Sampling piping

An advantage of this unit is that the sensor probe can be directly inserted into the measurement environment. In some cases, however, it may be desirable to sample the gas through a sampling pipe, with the sensor probe installed so as to measure the sample. In this case, the sampling pipe should be as short as possible.

Avoid using a sampling pipe made of rubber, plastic, silicone, or other materials which adsorb moisture easily. Instead, consider SUS, copper, Teflon, or the like.

Also, if the downstream side of the sampling pipe is open to the atmosphere, install a pipe approx. 0.5 to 1 m long on the exhaust side so that backflow from the downstream ambient atmosphere does not affect measurement.

■ Filter

To prevent the mirror from being contaminated (particularly with dust or dirt), the sensor cap should be covered with the included filter before starting sensor operation. The filter is made of porous fluororesin that allows water vapor but not water droplets to pass. Particularly when measuring a high dew point, the sensor filter is effective for preventing unwanted condensation inside the sensor probe caused by droplets that may disperse.

Additionally, the sensor filter has the effect of rectifying the gas that passes through the sensor probe. In particular, it is effective for steady measurement inside a pipe with a large flow rate.

However, note that the response time is slower when the sensor filter is used. If the gas contains only a small amount of material (dirt, dust, etc.) that could contaminate the mirror, particularly at a low flow rate of 50 mL/min or less, this unit can be operated without the filter.

If, on the other hand, the measurement environment is heavily contaminated with dust, dirt, soot, etc., it is necessary to avoid inserting the sensor probe directly. Use a sampling pipe with two- or three-stage particle filtering midstream. The exact method and pore diameter of the particle filters depends upon conditions in the measurement environment. The optimal material to use is the one with the least water adsorption effect.

■ Water leakage from the sensor

If the measurement environment changes rapidly from a low dew point to a high dew point, or if the heat-insulation of the sensor probe is inadequate during measurement of a high dew point, or if water droplets scatter, water may leak from the sensor. If this happens, it can be assumed that the unit is not correctly measuring the dew point temperature. Change measurement mode to standby and wait for the sensor to dry.

Depending on the actual symptoms, it may be possible to purge the sensor with a dry gas or to remove the sensor probe and wipe off the excess water. If water leaks from the sensor, the mirror may also need to be cleaned.

If water has leaked from the sensor, once the sensor is completely dry and the mirror has been cleaned (if necessary), sensor performance will return to normal.

■ Calculation of relative humidity

This unit directly measures the dew point temperature. However, if the temperature of the gas is measured at the same time, the relative humidity of the gas can be calculated using the formula below.

$$\text{Relative humidity (\% RH)} = \frac{\text{Saturated water vapor pressure at the dew point temperature (Pa)}}{\text{Saturated water vapor pressure at the temperature of the gas (Pa)}} \quad \text{--- (1)}$$

The saturated water vapor pressure used in the above formula can be calculated from the Sonntag formula below, where T is the temperature in degrees Kelvin:

$$\text{Saturated water vapor pressure (Pa)} = \exp(-6096.9385T^{-1} + 21.2409642 - 0.02711193T + 0.00001673952T^2 + 2.433502 \ln(T))$$

The following formula is used to convert degrees centigrade of temperature to Kelvin:

$$T(K) = \text{Centigrade temperature (}^\circ\text{C)} + 273.15$$

If it is thought that frost (ice) instead of dew (supercooled water) is produced on the sensor probe mirror, the Sonntag formula for calculating the saturated water vapor pressure of the ice must be used as the numerator of the relative humidity formula given above.

$$\text{Saturated water vapor pressure above ice (Pa)} = \exp(-6024.5282T^{-1} + 29.32707 - 0.010613868T + 0.000013198825T^2 + 0.49382577 \ln(T))$$

However, for the denominator of the relative humidity formula, the World Meteorological Organization (WMO) stipulates that the saturated water vapor pressure above ice should not be used, but rather the saturated water vapor pressure above (supercooled) water is used as a reference, even at temperatures of 0 °C or less, when calculating the relative humidity. Therefore, even if the temperature of the gas is 0 °C or less, it is not normally necessary to use the formula to calculate the saturated water vapor pressure above ice.

☞ JIS Z 8806, "Humidity – measurement methods" (Japanese only).

Chapter 5. BASIC OPERATION

5 - 1 Starting Up the Unit


1. Checking the installation status

Check the installation of this unit while referring to Chapter 3, PREPARATIONS FOR MEASUREMENT (on page 10).

2. Turning ON the power

Turn ON the POWER switch.

The Dew Point Temperature controller and Condensation Level controller mode indicators light up sequentially from left to right for 5 to 6 seconds after the power has been turned ON. This shows that the unit is being initialized. When all mode indicators are lit and initialization is complete, the status changes to either standby mode or measurement mode, depending on the mode when the power was last turned OFF.

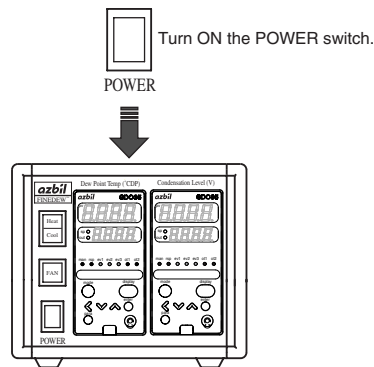



Mode indicators go on sequentially.
After 5 to 6 s, the unit begins to operate.

3. Turning ON/OFF the fan (when an L type sensor unit is connected)

If the FAN indicator-switch is pressed, the fan inside the L type sensor probe turns ON. Afterwards, the FAN switch is locked and the indicator goes on. If the FAN indicator-switch is pressed again, the lock is released, the fan turns OFF, and the indicator light goes out.

! Handling Precautions


- If an S type sensor unit is connected, this switch is not used. In this case it is best to leave the FAN indicator-switch turned off.

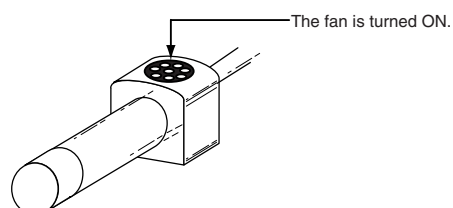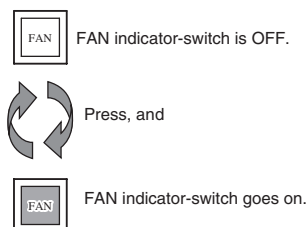


5 - 2 Switching between Standby Mode and Measurement Mode

1. Checking the current status

When the "man" mode indicator lamp on the Condensation Level controller is lit, the unit is on standby. When this lamp is off, the unit is in measurement mode.

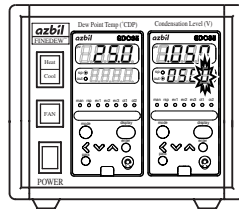


Standby mode

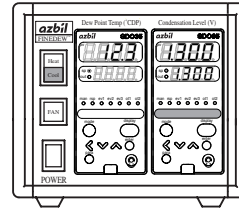

Measurement mode


2. Changing from standby mode to measurement mode

If the [mode] key on the Condensation Level controller is pressed and held for a while, *Auto* begins blinking on the Condensation Level controller's mirror status display. After 2 seconds have elapsed, the status is set (display is lit steadily). When the [mode] key is released, measurement mode display begins.

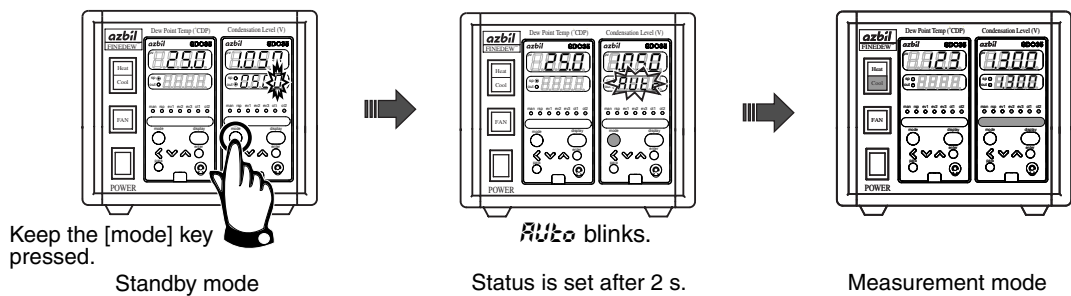

3. Changing from measurement mode to standby mode

If the [mode] key on the Condensation Level controller is pressed and held, *man* begins blinking on the mirror status display of the Condensation Level controller. After 2 seconds have elapsed, the status is set (display is lit steadily). When the [mode] key is released, standby mode display begins.

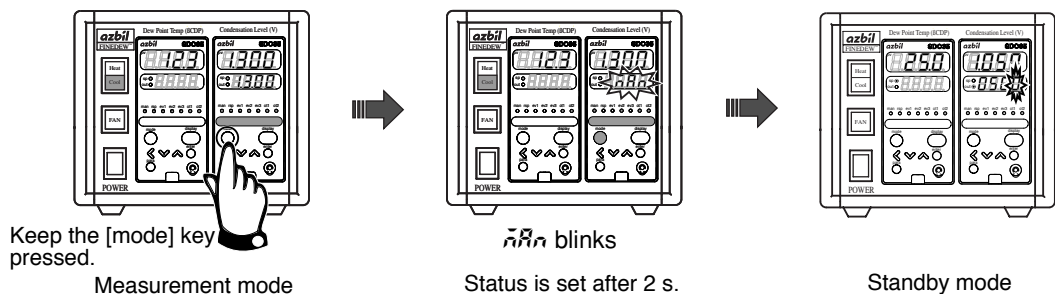


5 - 3 Operation in Measurement Mode

1. Measuring the dew point temperature (measurement mode operation)

When this unit enters measurement mode, the Condensation Level controller starts to control (cool/heat) the status of the mirror so that the condensation level remains at the target value for condensation level control. Depending on whether the Peltier device is cooling or heating, the "Cool" or "Heat" lamp will be lit.

When the condensation level enters within a certain preset range of the target value for volume of condensation, a control status signal is output and all the LEDs in the multi-status indicator on the Condensation Level controller light up. At this point, the dew point temperature indicated on the dew point temperature display is within the accuracy range. Additionally, the status of the control status signal is output to CN4.


The first time that standby mode is changed to measurement mode, it takes approximately 1 to 10 minutes until the displayed dew point temperature enters its accuracy range.

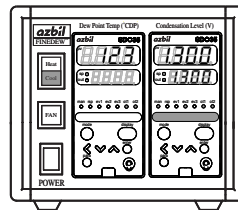

Measurement mode

2. Changing the display on the Condensation Level controller (in measurement mode)

The present condensation level is shown on the condensation level display immediately after standby mode has been changed to measurement mode. "1.300," the target value for condensation level control, is shown on the mirror status display. Additionally, the "sp" indicator on the Condensation Level controller lights up.

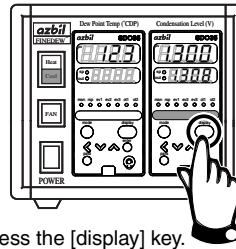

Press the [display] key.

When the [display] key on the Condensation Level controller is pressed, the current condensation level continues to be displayed on the condensation level display. However, the mirror status display now shows the Peltier device current, as indicated by the fact that the "Out" indicator is lit. If this value is larger than 050.0, cooling current is being applied to the Peltier device. If the value is smaller than 050.0, heating current is being applied. To protect the Peltier device and other components, the value is limited to a range of 016.6 to 090.0.




Press [display] again.

When the [display] key on the Condensation Level controller is pressed again, the previous display is shown. Subsequently, every time the [display] key on the Condensation Level controller is pressed, the change of display described above is repeated.


3. Checking and changing the PID control parameters on the Condensation Level controller

After the [para] key is pressed on the Condensation Level controller, the PID parameters are sequentially shown on the condensation level display of the Condensation Level controller while their current settings are shown on the mirror status display.

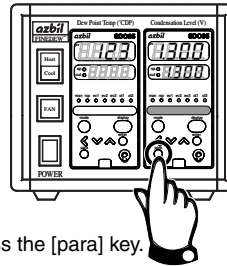


Press the [para] key.

First, P - I is shown on the condensation level display. The P setting (default: 600.0) for the Peltier device cooling current control is shown on the mirror status display.

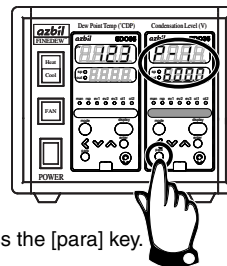


Press the [para] key.

When [para] is pressed again, I - I is shown on the condensation level display and the I setting (default: 6.0) for the Peltier device cooling current control is shown on the mirror status display.

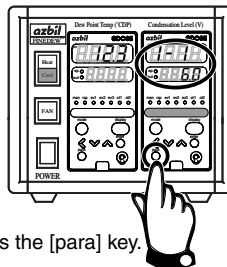


Press the [para] key.

When [para] is pressed again, D - I is shown on the condensation level display and the D setting (default: 2.0) for the Peltier device cooling current control is shown on the mirror status display.

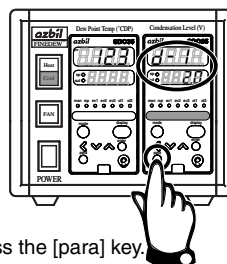


Press the [para] key.

When [para] is pressed again, P - i is shown on the condensation level display and the P setting (default: 800.0) for the Peltier device heating current control is shown on the mirror status display.

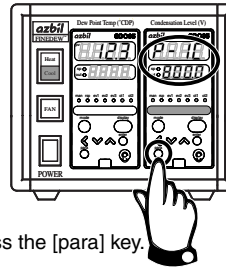


Press the [para] key.

When [para] is pressed again, I - i is shown on the condensation level display and the I setting (default: 6.0) for the Peltier device heating current control is shown on the mirror status display.

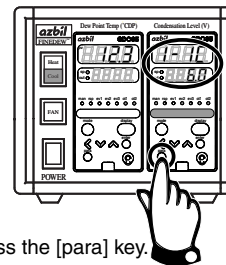

Press the [para] key.

When [para] is pressed again, D - i is shown on the condensation level display and the D setting (default: 2.0) for the Peltier device heating current control is shown on the mirror status display.

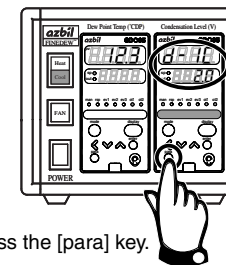


Press the [para] key.

The next time the [para] key is pressed, the display returns to the beginning. Subsequently, every time the [para] key on the Condensation Level controller is pressed, the operation described above is repeated.

! Handling Precautions


- Do not press the [para] key continuously for 2 s or longer, or the Condensation Level controller will enter setup mode. If this happens accidentally, press the [display] key on the Condensation Level controller to return to the previous status.

To change the PID setting, press the [enter] key on the Condensation Level controller when the desired PID parameter is displayed. The least significant digit of the current PID parameter setting will blink, indicating that the setting can be changed.

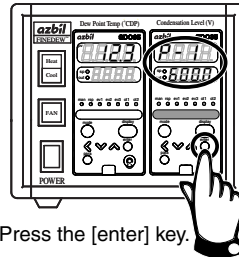

Press the [enter] key.


Move the blinking cursor to the desired digit with the [<] key, and then change the value of the digit to the desired level with the [v] or [^] key.

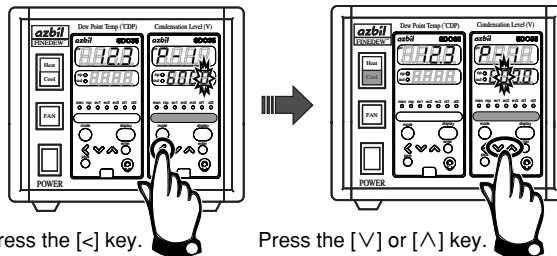

Press the [<] key.


Press the [v] or [^] key.

When [enter] is pressed again, the blinking stops and the number is steadily lit, indicating that the new value has now been accepted.

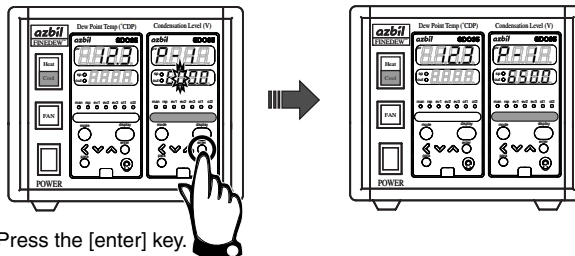

Press the [enter] key.

If the [display] key on the Condensation Level controller is pressed while the current setting of the PID parameter is shown on the mirror status display, the mirror status display will again display what it was showing immediately before the current setting for the PID parameter was shown. Or, if no key is pressed for 3 minutes or longer, the mirror status display will automatically return to its previous display status.

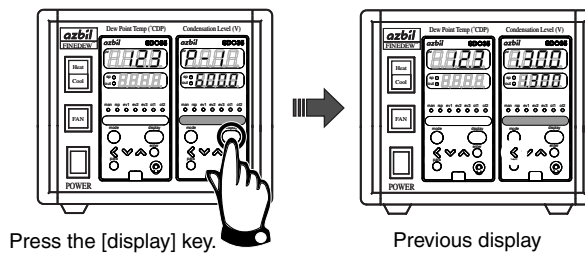

Press the [display] key.

Previous display

5 - 4 Operation in Standby Mode


1. Operation in standby mode

When this unit is switched into standby mode, the Condensation Level controller stops control (cooling and heating) of the mirror status. Eventually, the temperature of the mirror conforms to the ambient temperature in the sensor probe and the mirror becomes dry. As a result, the condensation level stabilizes at its minimum level (the "condensation base level.")

The condensation base level may vary depending on the individual product, but normally, a value of approximately 0.800 to 1.100 (around 1.000) is correct.

If the reading is 1.200 or more, clean the mirror.

➔ 6-1, "Cleaning the mirror" (on page 36)

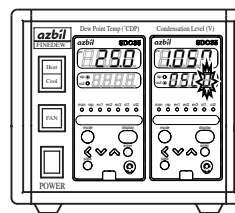


Example of standby mode

2. Changing the condensation level display (in standby mode)


Immediately after measurement mode is changed to standby mode, the current condensation level is shown on the upper display of the Condensation Level controller. The Peltier device current is shown on the lower (mirror status) display, as indicated by the "out" indicator. The Peltier device current is automatically reset to 050.0 regardless of the previous value, so that the device does not receive either cooling or heating current.

On the mirror status display, the least significant digit of the Peltier device current starts blinking, indicating that the setting can be changed.

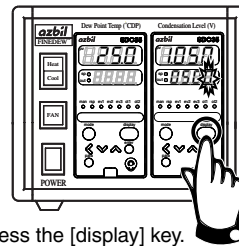

Press the [display] key.

When the [display] key is pressed on the Condensation Level controller, the condensation level continues to be displayed on the upper display, but the mirror status display now shows the target value for condensation level (1.300), as indicated by the fact that the "sp" indicator is now lit.

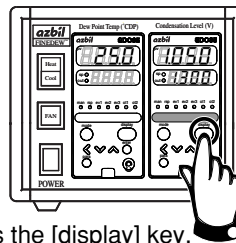


Press the [display] key.

When the [display] key is pressed again, the original display is shown. Subsequently, every time the [display] key on the Condensation Level controller is pressed, the operation described above is repeated.

3. Changing the Peltier device current manually

When the Peltier device current is shown on the mirror status display of the Condensation Level controller, move the blinking cursor to the desired digit with the [\leftarrow] key, and then change the value of the digit to the desired level with the [\downarrow] or [\uparrow] key. In this way the Peltier device current can be changed manually. The changed value affects the Peltier device current immediately, without the need to press the [enter] key.

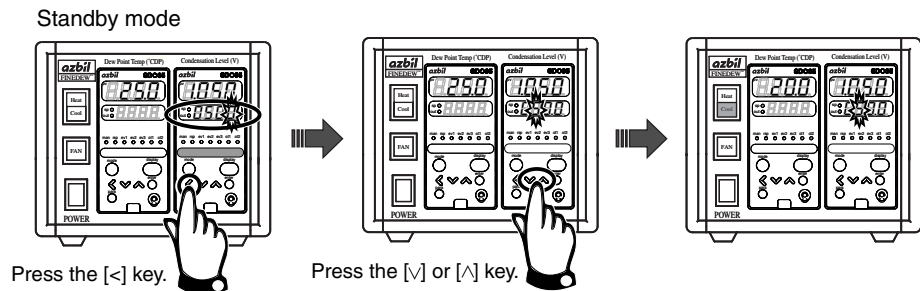

If a value larger than 050.0 is set for the Peltier device current, cooling current is applied to the Peltier device and cooling of the mirror begins. To verify that this is the case, check that the value shown on the dew point temperature display decreases.

As cooling continues, condensation will begin to occur on the mirror once its temperature is at or below the dew point temperature. This can be verified by checking that the value shown on the Condensation Level controller upper display increases from the condensation base level.

If cooling of the mirror continues still further, and the condensation level exceeds 5.0, the alarm display will be activated (*S.400* and *AL01* will be alternately displayed).

Conversely, if a value smaller than 050.0 is set for the Peltier device current, heating current is applied to the Peltier device and heating of the mirror begins. To verify that this is the case, check that the value shown on the dew point temperature display increases. Due to the operating principle of the Peltier device, the temperature of the mirror increases in only seconds.

Handling Precautions

- When manually setting the Peltier device current, be sure to check the temperature of the mirror. If heating current is applied and the temperature of the mirror reaches 110 °C or more, a serious problem, such as breaking of the Peltier device, may occur in a short time, causing the Peltier device protection function to be activated.

Also, if cooling current is applied to the Peltier device so that excessive condensation results, a strain is placed on the sensor probe, possibly causing device failure.


5 - 5 Using the Dew Point Temperature Upper and Lower Limit Alarms

1. Operating the dew point temperature upper and lower limit alarms

Operating the dew point temperature upper and lower limit alarms

If the value shown on the dew point temperature display is larger or smaller than the preset values, the "ev1" lamp on the Dew Point Temperature controller lights up, and an ON signal is output to CN4.

This alarm output is a momentary output. The differential is 0.5 °C.

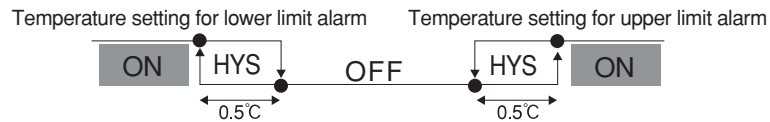


The dew point temperature upper and lower limit alarms remain OFF during initialization immediately after the power has been turned ON. They are enabled when the unit enters standby mode or measurement mode.

! Handling Precautions


- If the value shown on the dew point temperature display satisfies the preset alarm conditions, an alarm is output regardless of whether the control status signal is ON or OFF.

2. Checking and changing the dew point temperature upper and lower alarm settings

Press the [para] key on the Dew Point Temperature controller, either in standby mode or in measurement mode. E1 is shown on the upper (dew point temperature) display, and the current dew point temperature lower limit alarm setting is shown on the lower display (dew point temperature upper/lower limit alarm display).

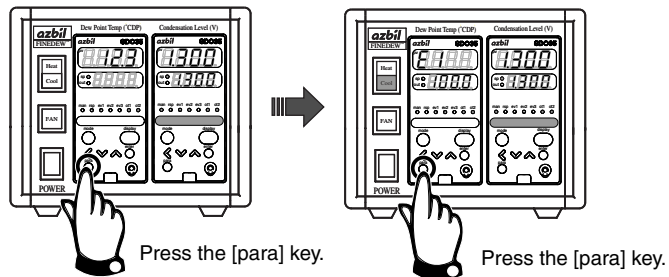

When [para] is pressed again, *E 1.56* is shown on the dew point temperature display and the current dew point temperature upper limit alarm setting is shown on the dew point temperature upper/lower limit alarm display.

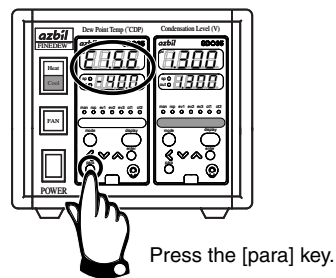


When [para] is again pressed, the lower limit alarm setting is shown again. Subsequently, every time the [para] key on the Dew Point Temperature controller is pressed, the above operation is repeated.

! Handling Precautions


- Do not press the [para] key continuously for 2 seconds or longer, or the Dew Point Temperature controller will enter setup mode. If this happens accidentally, press the [display] key on the Dew Point Temperature controller to return to the previous status.

To change the settings for the dew point temperature upper or lower limit alarm, first press [enter] on the Dew Point Temperature controller when the alarm setting you wish to change is displayed. The least significant digit of the alarm setting starts blinking, allowing you to change the setting.

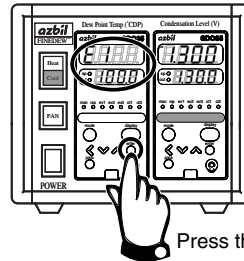

Press the [enter] key.


Using the [<] key, move the blinking cursor to the digit that you want to change, and then change the value to the desired number with the [v] or [^] key.

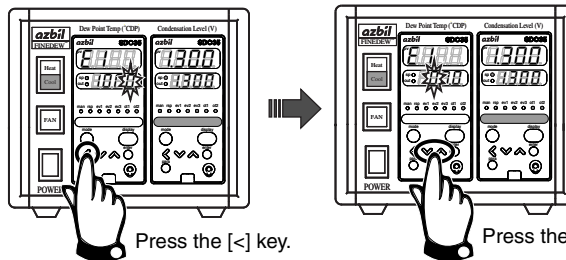

Press the [<] key.


Press the [v] or [^] key.

After the desired value is set, press [enter] again, and the blinking will stop, indicating that the value has been set.

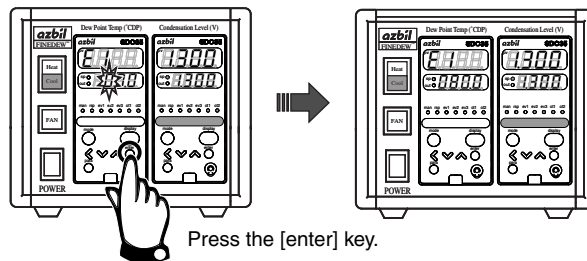

Press the [enter] key.

When the [display] key is pressed while the dew point temperature upper/lower limit setting is shown on the lower display, the upper (dew point temperature) display once again displays the dew point temperature. Or, if no key is pressed for 3 minutes or longer, the dew point temperature display automatically resumes display of the dew point temperature.

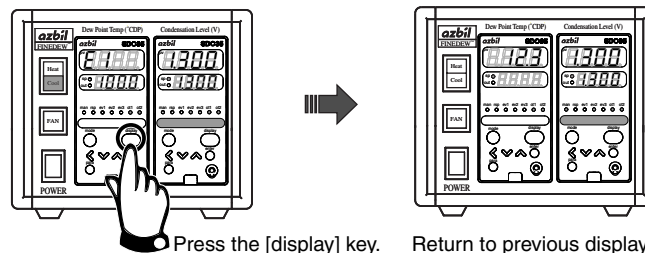

Press the [display] key.

Return to previous display

5 - 6 Peltier Device Protection Function

1. Operation of the Peltier device protection function

If the value shown on the dew point temperature display is 110 °C or more or -45 °C or less, the protection function of the Peltier device is activated to shut off the current to the Peltier device. When this happens, the "ev2" lamp mode indicator on the Dew Point Temperature controller lights up and all the multi-status indicator LEDs start blinking.

If the Peltier device protection function is activated, turn OFF the power to the controller immediately. Then, determine why the Peltier device protection function was activated. After the cause has been removed, turning ON the power again will reset the Peltier device protection function.

Chapter 6. MAINTENANCE AND TROUBLESHOOTING

6 - 1 Cleaning the Mirror

■ Checking the mirror for contamination

Put the sensor probe in normal (room) temperature and humidity, and check the condensation base level while referring to section 5-4, "Operation in standby mode" (on page 29). There are individual differences in condensation base level depending on the product, but normally a value around 1.000 (approx. 0.800 to 1.100) is correct.

The user should periodically check the condensation base level and be aware of the condition of the mirror. As mirror contamination increases, the condensation base level gradually increases. From this it can be determined whether or not the mirror needs to be cleaned. If the condensation base level exceeds 1.200, clean the mirror.

■ Cleaning the mirror

- (1) Before cleaning the mirror, have cotton swabs and cleaning solution at hand.
Use the cotton swabs supplied with this unit, or use degreased industrial cotton swabs.

! Handling Precautions

- Great care should be taken since cotton easily comes off of some industrial cotton swabs.
- Use industrial cotton swabs with small cotton balls.
- Do not use ordinary cotton swabs intended for make-up or hygiene.
- Use ethanol or deionized water for the cleaning solution.


- (2) Before cleaning the mirror, put the basic controller on standby and check the condensation base level. After that, turn OFF the power.

- (3) Remove the sensor probe from the measurement environment.


! Handling Precautions

- Take appropriate measures so that removal of the sensor probe does not adversely affect the measurement environment.
- Before removing the sensor probe, make sure that its temperature is the same as that of the ambient temperature. In particular, if the temperature of the sensor probe is lower than that of the ambient temperature, removing the sensor probe suddenly may cause unwanted condensation on the sensor.


- (4) Remove the sensor filter from the sensor cap. Check the filter for contamination or deterioration. If necessary, get a replacement filter.

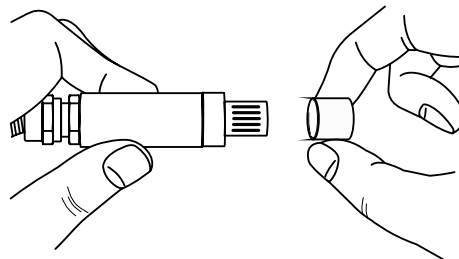

- (5) Check the relationship between the main part of the sensor and the cap. In particular, check that the half-slit part of the sensor cap blocks the front of the mirror and that the half-slit part is located in a position where it correctly blocks unnecessary reflected light from the outside. After checking these points, remove the sensor cap.

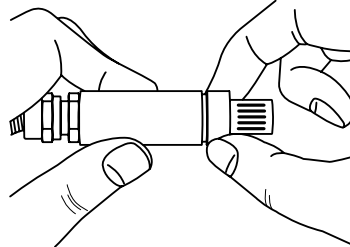


- (6) Visually check the mirror for contamination. Sometimes contamination on the mirror is visible (look for dust or dirt on the surface, or a furry coating), but other times it is not. Also, visually check the sensor's Peltier device, resistance temperature detector, and optical fiber pipe.

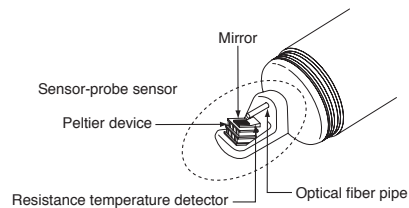

- (7) Moisten a cotton swab with cleaning solution (ethanol or deionized water) and gently wipe contamination off the top surface of the mirror, the light emitting and receiving surfaces at the end of the optical fiber, and the adjacent parts with the cotton swab. Be particularly careful to wipe the top surface of the mirror lightly so that it is not scratched.


! Handling Precautions

- Do not use any solvent or chemical other than ethanol or deionized water for the cleaning solution. Doing so may change the wettability of the mirror, resulting in a serious problem.

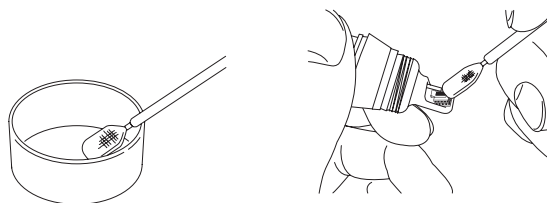


- (8) After the cleaning solution has dried, a coating may remain on the top surface of the mirror. If so, wipe it off with a dry cotton swab.


- (9) Observe the sensor again to check that there are no problems and that contamination has been removed completely. Afterwards, put the sensor cap on the sensor. Check that the half-slit part of the sensor cap blocks the front of the mirror and that the half-slit part is located at a position where it correctly blocks unnecessary reflected light from the outside.

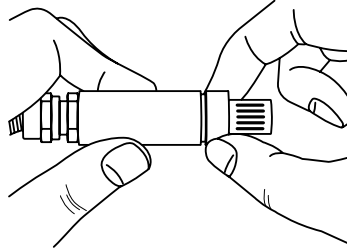

- (10) Next, cover the sensor cap with the filter again. If the filter is a new replacement, make sure that no fluororesin dust from cutting remains inside it.

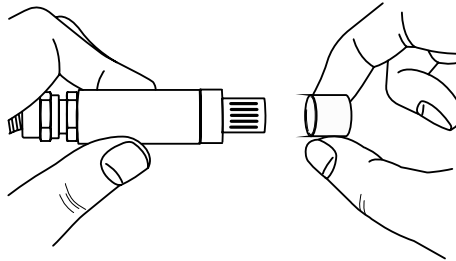

- (11) After the sensor probe has been reinstalled in its previous measurement environment, turn ON the power to the basic controller to check the condensation base level in standby mode. If the condensation base level has improved as compared to that before cleaning the mirror, and if a normal value (approx. 0.800 to 1.100) is shown, the cleaning of the mirror was successful.

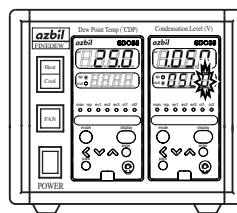

Example of standby mode

6 - 2 Troubleshooting

Symptom		Cause	Corrective action
Dew point temperature controller	RLO1 blinking	The resistance temperature detector is faulty.	Contact Yamatake sales staff.
		The temperature of the sensor probe exceeds 240 °C.	Check measurement conditions.
	RLO2 blinking	The resistance temperature detector is short-circuited.	Contact Yamatake sales staff.
		The temperature of the sensor probe is -60 °C or less.	Check measurement conditions.
	RLO1 and RLO3 are shown alternately. Multi-status indicator LEDs are lit sequentially from left to right.	The relay connector is loose.	Tighten the relay connector.
		Resistance temperature detector burnout	Contact Yamatake sales staff.
All multi-status indicator LEDs are blinking.	The Peltier device protective function is ON.	Check measurement conditions.	
Condensation level controller	RLO1 blinking	Excessive condensation (water leakage from sensor probe)	Dry the sensor probe sensor.
		Mirror contamination.	Clean the mirror.
		The sensor cap is loose.	Check that the sensor cap is tightened firmly and that the half-slit part is located in the proper position.
		The black paint inside the sensor cap has peeled off.	Check the inside of the sensor cap.
	RLO2 blinking	The relay connector is loose.	Tighten the relay connector.
	The condensation level does not increase.	A dry gas with a lower dew point than the measurement range is being measured.	Check if the measured dew point temperature is lower than the bottom of the measurement range.
		Optical fiber disconnection	Contact Yamatake sales staff.
	The condensation level is not stable.	The optical fiber is damaged (disconnection or cross-talk increase).	Contact Yamatake sales staff.
	The contamination base level is high in standby mode.	The mirror is contaminated.	Clean the mirror.
	The contamination level does not decrease even after the mirror has been cleaned.	The mirror is not completely clean.	Clean the mirror again.
The optical fiber is damaged (disconnection or cross-talk increase).		Contact Yamatake sales staff.	
Dew point temperature controller/ Condensation level controller	RLO10 blinking	A/D converter failure	If the problem is not solved after the power has been turned OFF and back ON again, contact Yamatake sales staff.
	RLO5 blinking	Parameter error	
	RLO6 blinking	Adjustment data failure	
	RLO7 blinking	RAM area parameter failure	
	RLO8 blinking	ROM area parameter failure	
RLO9 blinking	ROM failure	Contact Yamatake sales staff.	
Heat/Cool indicator	The indicated dew point temperature does not decrease and the condensation level does not increase even though the Cool indicator is lit.	Peltier device damage	Contact Yamatake sales staff.
	The Heat/Cool indicator is not lit even though the unit functions correctly.	LED burnout	Contact Yamatake sales staff.
Fan switch	The fan does not rotate even though the FAN indicator-switch is lit.	Fan failure	Contact Yamatake sales staff.
	The indicator does not go on even though the FAN switch is turned ON.	LED burnout	Contact Yamatake sales staff.

6 - 3 Calibration

■ Calibration before shipment

Before shipment from the factory, the unit is calibrated at three points of moist air produced by a divided flow humidity generator system, namely at 20, 50, and 90 % RH (all at 25 °C). Calibration and checking of this system is done by measuring this moist air with a reference hygrometer. The results of the calibration are recorded on the inspection data sheet. This sheet has been attached to the product before shipment. Be sure to save the inspection data sheet.

■ Certificate of traceability

In addition to the inspection data sheet, it is possible to receive a certificate of traceability (ordered as part of the model No. specification). The certificate is sent to the customer separately from the product. Be sure to save the certificate of traceability.

■ Recalibration after repair and maintenance

After repair or maintenance of the sensor unit or basic controller, the inspection data sheet and certificate of traceability issued shipment become invalid. If factory calibration is needed after repair or maintenance work, contact Yamatake sales staff. If recalibration is needed, the basic controller or sensor unit which may be at customer site must be sent back to Yamatake.

■ Issue an accredited certificate with JCSS symbol

Measurement Standards Center of Yamatake Corporation is assessed and accredited as one of the Accredited Calibration Laboratories for temperature, pressure and humidity. They offer accredited calibration services under the JCSS calibration laboratory accreditation system based on the Japanese Measurement Law.

If an accredited calibration certificate with the JCSS symbol in combination with the ILAC-MRA mark is desired for this unit, contact Yamatake sales staff. In this case, since the certificate of calibration with the JCSS symbol with ILAC MRA means that a specialist has already checked the traceability of the unit to national measurement standards, a certificate of traceability is not required.

Notes:

ILAP: International Laboratory Accreditation Cooperation, a cooperative organization of institutes that authorize the test laboratories and configuration institutions admitted in a country or an economic area. As of November 2007, there are 58 member organizations in the ILAC. The certificate of calibration with the JCSS symbol with ILAC MRA is effective in the participating countries and economic areas.

Global MRA: Global Mutual Recognition Arrangement. This arrangement was concluded by the International Committee of Weights and Measures (CIPM), which consists of representatives of major national measurement standard organizations of countries acceding to the Meter Convention.

Chapter 7. DISPOSAL

When disposing of this unit, dispose of it appropriately as industrial waste in accordance with local laws and regulations.

Chapter 8. SPECIFICATIONS

8 - 1 Specifications

■ S type sensor unit

Item	Specification	Remarks	
Sensor probe	Dew point temperature measurement range	0 to 25 °C DP	At probe temperature of 25 °C.
		55 to 80 °C DP	At probe temperature of 80 °C.
		75 to 100 °C DP	At probe temperature of 100 °C.
	Accuracy	±0.5 °C DP (at 0 to 100 °C DP)	The probe temperature is maintained at 25 °C when the dew point is 25 °C DP or less. The probe temperature is heated to the dew point temperature or more when the dew point is 25 °C DP or more.
	Peltier device	2-stage	
	Max. cooling capacity	30 °C (in air)	At probe temperature of 25 °C.
	Mirror material	Single-crystal silicon	Resistance to corrosive gas is not guaranteed.
	Gas contacting material	SUS316, Fluororesin (PFA)	
	Pipe mounting method	Direct insertion of Swagelok 3/4" union tee	
	Mounting angle	Downward vertical to horizontal level	Mount so that condensation does not accumulate.
	Orientation with respect to flow passage	Unrestricted	
	Withstand pressure of inserted part	Less than 1 MPa	When mounted in a Swagelok 3/4" union tee.
	Rated operating temperature range	-20 to +100 °C	
	Rated operating dew point range	-40 to +100 °C DP	Accuracy is not guaranteed if condensation is occurring
Sensor cable length	Approx. 1.8 m		
Connection box	Rated operation temperature range	0 to 40 °C	
	Rated operation humidity range	10 to 95 % RH	Without condensation
	Mass	Approx. 550 g	Including sensor cable and probe.
Connection cable	Cable length	Approx. 50 cm	
	Mass	Approx. 250 g	

Notes:

- 1) The measurable dew point range may vary depending on the type of gas and the measurement conditions.
- 2) °C DP is an expression used in industrial fields to specifically designate the dew point temperature.
- 3) The maximum cooling capacity indicates the temperature difference between the cooling surface and the heat radiating surface when the Peltier device is operated at its maximum cooling performance level.


■ L type sensor unit

Item		Specification	Remarks
Sensor probe	Dew point temperature measurement range	-30 to +25 °C DP	At probe temperature of 25 °C.
		25 to 80 °C DP	At probe temperature of 80 °C.
		45 to 100 °C DP	At probe temperature of 100 °C.
	Accuracy	±0.5 °C DP (at -30 to +100 °C DP)	The probe temperature is maintained at 25 °C when the dew point is 25 °C DP or less. The probe temperature is heated to the dew point temperature or more when the dew point is 25 °C DP or more.
	Peltier device	2-stage	
	Max. cooling capacity	60 °C (in air)	At probe temperature of 25 °C.
	Mirror material	Single-crystal silicon	Resistance to corrosive gas is not guaranteed.
	Gas contacting material	SUS316, Fluororesin (PFA)	
	Pipe mounting method	Direct insertion of Swagelok 3/4" union tee	
	Mounting angle	Downward vertical to horizontal level	Mount so that condensation does not accumulate.
	Orientation with respect to flow passage	Unrestricted	
	Withstand pressure of inserted part	Less than 1 MPa	When mounted in a Swagelok 3/4" union tee.
	Rated operating temperature range	-20 to +100 °C	
Rated operating dew point range	-40 to +100 °C DP	Accuracy is not guaranteed if condensation is occurring.	
Sensor cable length	Approx. 1.8 m		
Connection box	Rated operation temperature range	0 to 40 °C	
	Rated operation humidity range	10 to 95 % RH	Without condensation
	Mass	Approx. 750 g	Including sensor cable and probe.
Connection cable	Cable length	Approx. 50 cm	
	Mass	Approx. 250 g	

Notes:

- 1) The measurable dew point range may vary depending on the type of gas and the measurement conditions.
- 2) °C DP is an expression used in industrial fields to specifically designate the dew point temperature.
- 3) The maximum cooling capacity indicates the temperature difference between the cooling surface and the heat radiating surface when the Peltier device is operated at its maximum cooling performance level.

■ Basic controller

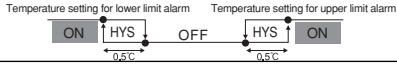
Item		Specification	Remarks
General	Operating temperature range	0 to 40 °C	
	Operating humidity range	10 to 95 % RH	Without condensation
	Power voltage	85 to 264 Vac	
	Power frequency	50/60 Hz ± 2 Hz	
	Power consumption	50 VA or less	
	Mass	Approx. 2.7 kg	With handle.
Input	Sensor input	Connectable sensor unit types: S, L	
Output *	Dew point temperature output (voltage)	Output range: 0 to 10 Vdc	In the -50 to +200 °C DP range
		Output accuracy: ±0.1 % FS or less	±1 % FS if the voltage is 0 to 0.05 V.
		Allowable load resistance: 1kΩ or more.	
	Dew point temperature output (current)	Output range: 4 to 20 mA (2.4 to 21.6 mA)	In the -50 to +200 °C DP range
		Output accuracy: ±0.1 % FS or less	
		Allowable load resistance: 600Ω or less	
	condensation level output (voltage)	1 to 5 Vdc (0.6 to 5.4 Vdc)	Applicable to condensation levels 1 to 5
		Output accuracy: ±0.1 % FS or less	
		Allowable load resistance: 1 kΩ or more.	
	condensation level output (current)	4 to 20 mA (2.4 to 21.6 mA)	Applicable to condensation levels 1 to 5
		Output accuracy: ±0.1 % FS or less	
		Allowable load resistance: 600Ω or less.	
	Dew point upper and lower limit alarms (contact output)	Setting range: -40 to +100 °C	
		Differential: 0.5 °C	
		Contact structure: 1a (SPST)	
		Contact rating: 2A	250 Vac / 30 Vdc (resistance load)
Contact voltage: 250 Vac / 30 Vdc			
Min.open/close rating: 5 Vdc/10 mA			
Service life of contact: 100,000 operation cycles or more		2 A at 250 Vac/30 Vdc (resistance load)	
Control status (Contact output)		Contact structure: 1a (SPST)	
Protection	Peltier device protection function	Operative at 110 °C or more and -45 °C or less	Peltier current is shut off by protection function. To resume operation, it is necessary to turn ON the power again.
		Communication standard	RS-485
		Communications system	Multi-point
		Max. transmission distance	500 m
		Number of wires	3-lead
Communications	Terminating resistor	Do not use.	
	Communication type	CPL, MODBUS	

* Voltage and current output are determined by the model No.

8 - 2 External Dimensions


■ S type sensor unit

Unit: mm

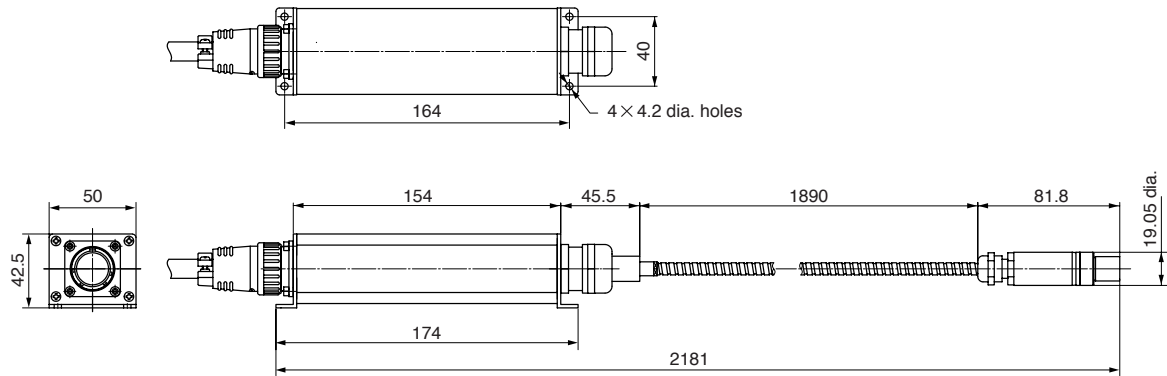

■ L type sensor unit


Unit: mm

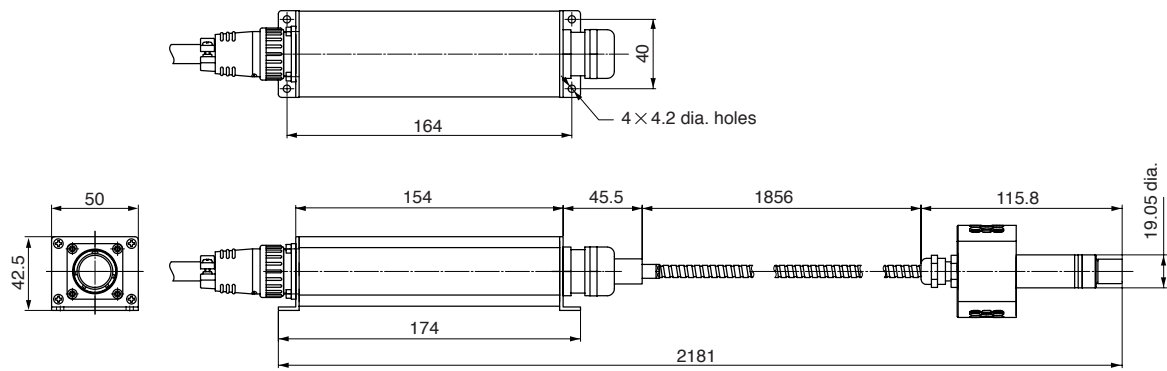


■ Basic controller

Unit: mm

● Models with handle

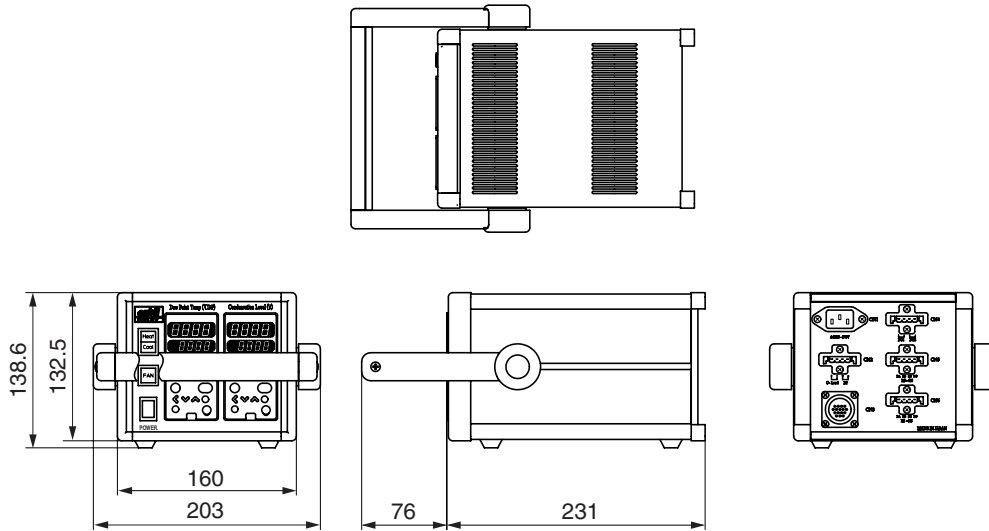

● Models with panel mount brackets

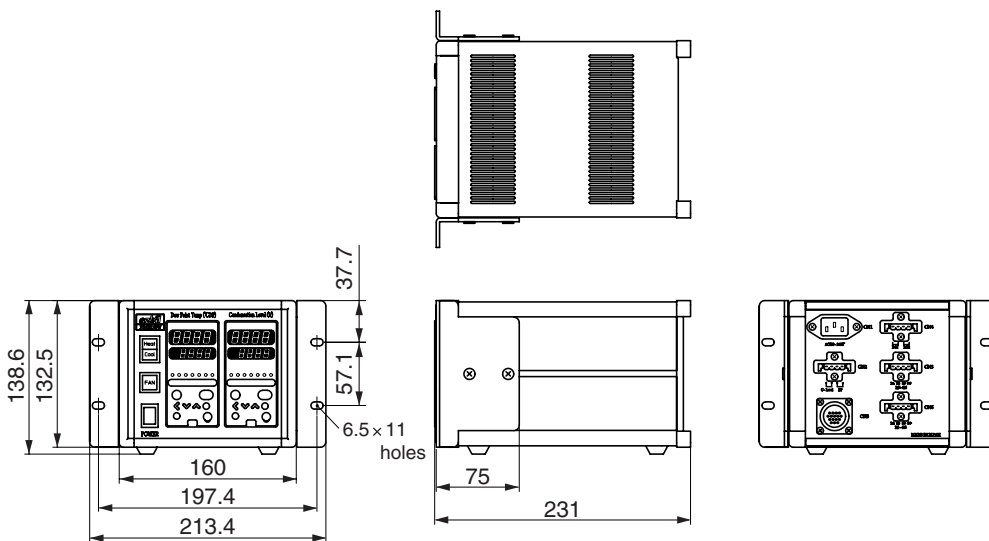

azbil

Yamatake Corporation
Advanced Automation Company

1-12-2 Kawana, Fujisawa
Kanagawa 251-8522 Japan

URL: <http://www.azbil.com>

Specifications are subject to change without notice. (08)

1st Edition: Issued in Sep. 2008 (W)